

APEX OUTDOOR X-LARGE FLOOR LAMP



SLOFL10927

General Product Information




Safety Information

  For use only on GFCI protected circuits.

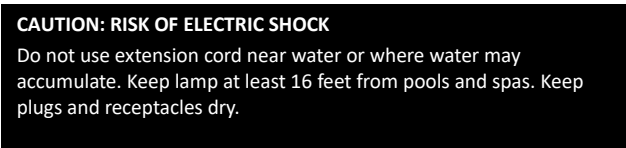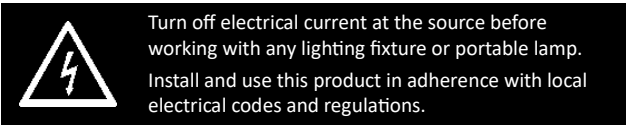


WARNING: When using outdoor use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

 - a) Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance's plug.
- b) Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
- c) Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW. READ ALL INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

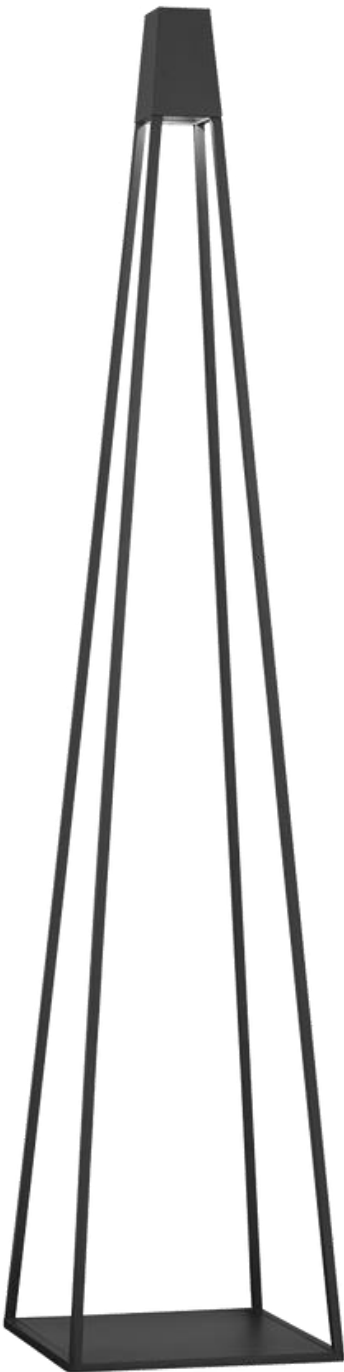

FIXTURE PARTS

 - A. Lamp Body
- B. LED
- C. Lamp Base
- D. Electrical Cord

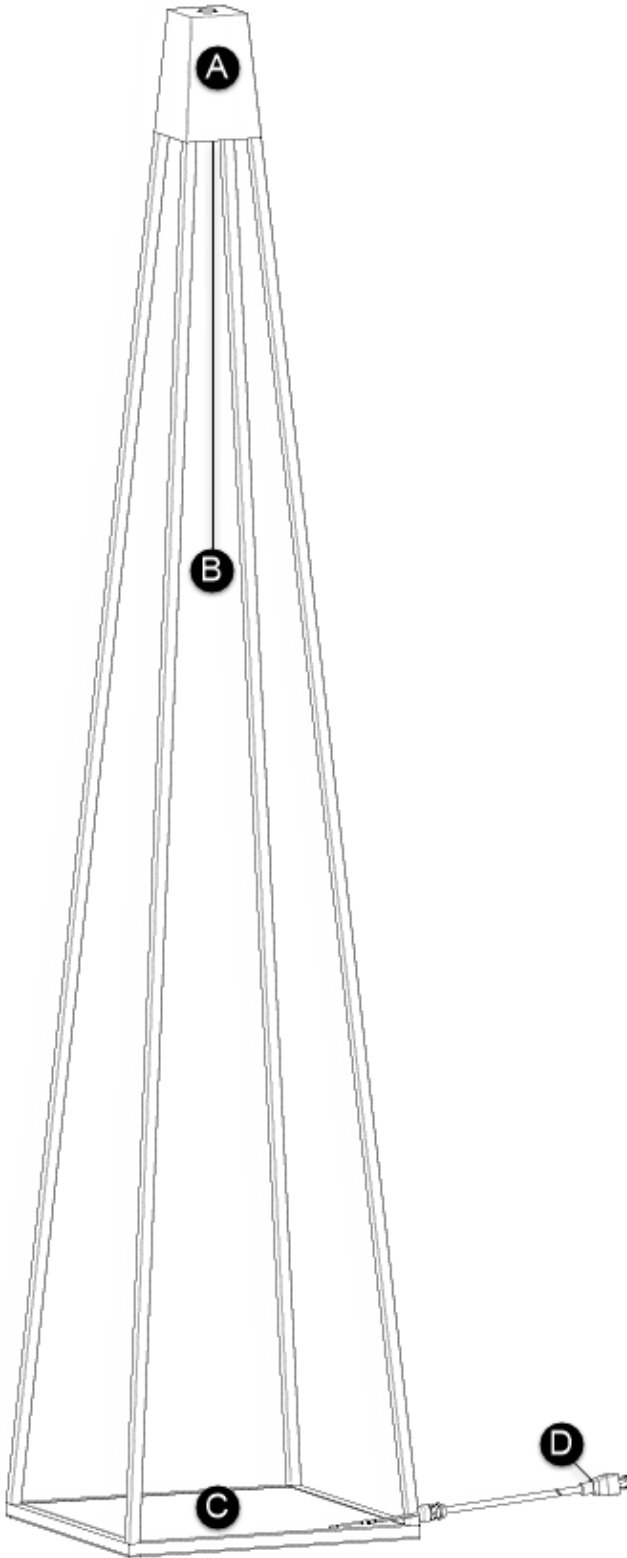

INSTRUCTIONS

1. Remove the lamp and all its parts from the packaging.
2. Plug the fixture into a functioning electrical outlet.
3. Use the light switch to turn the lamp on/off to test its functioning and complete the process.