
ASSEMBLY INSTRUCTIONS FOR Field adjustment

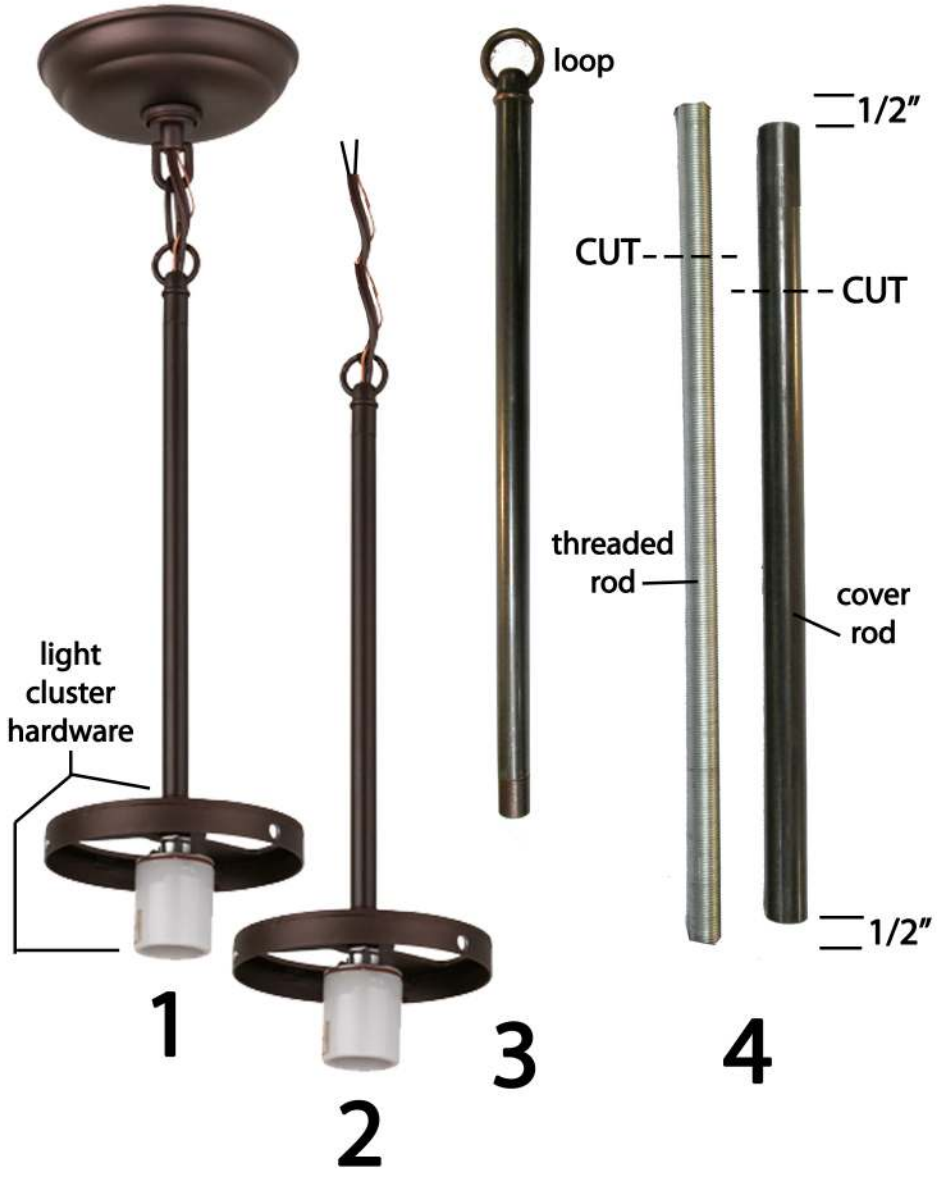

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1.)Remove light socket hardware w/rod & wire from chain and canopy.
2.)Unscrew the loop from rod.
3.)Remove cover rod from threaded rod. Unscrew threaded rod from light cluster hardware. Pull wire out from threaded rod.
4.)Make your cut to the cover rod. When cutting the threaded rod, you need to make your cut about an inch longer than cover rod. This way there is a half an inch that is coming out of each end of the cover rod. Also file the end of the threaded rod to accomodate screwing into loop or coupling.
5.)Re-assemble in opposite order in which you took it apart.