VISUAL COMFORT & CO.

MODERN COLLECTION

RONAN 8 WALL SCONCE

KWOWS60827OB


General Product Information



Product Warranty

FCC Statement

Suggested/Required Tools

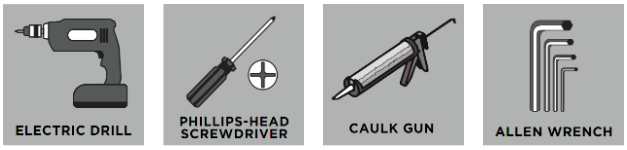

Safety Information

CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

USE MINIMUM 90°C SUPPLY CONDUCTORS.

Turn off electrical current at the source before working with any lighting fixture or portable lamp.


Install and use this product in adherence with local electrical codes and regulations.



© 2025 Visual Comfort & Co. All rights reserved.

FIXTURE PARTS

A. Junction box
B. Wire Nut Connections
C. Driver
D. Mounting Plate
E. Fixture Screws
F. Allen Wrench
G. Fixture Backplate/Base
H. Fixture Arm
I. Fixture
J. LED
K. Fixture Shade

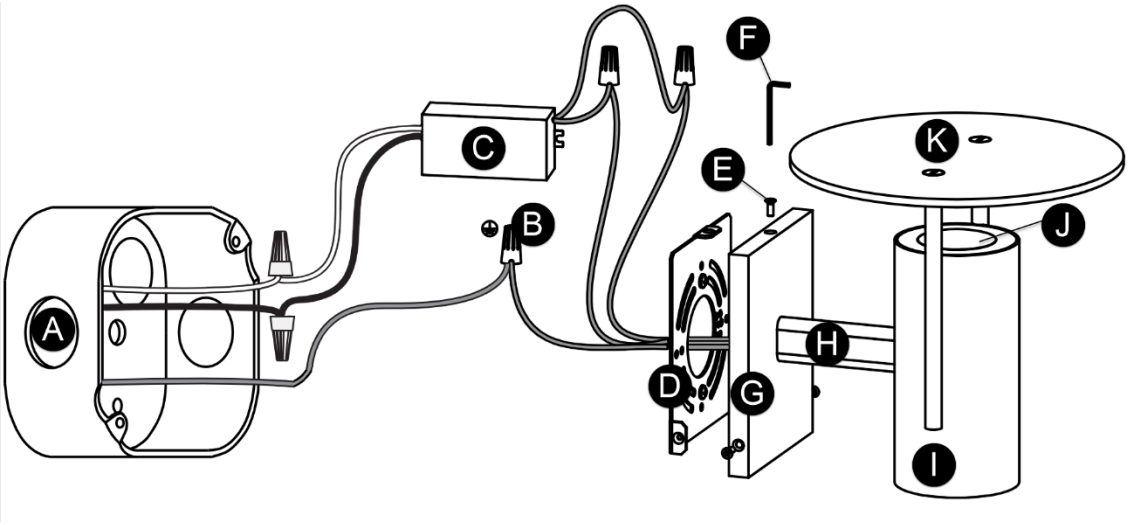

INSTRUCTIONS

I. Preparing for Installation

1. Unbox and examine all the items included in the fixture's packaging.
2. Separate the mounting plate from the fixture's backplate by removing the by fixture screws using the provided Allen wrench.

II. Wiring the Fixture & Installing the Mounting Plate

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. Connect the LED driver input wires to the local power line wires. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
    a) Neutral driver wire (white) to neutral power line wire
    b) Hot driver wire (black) to hot power line wire
3. Place the driver in the junction box, ensuring the output driver wires are accessible.
4. Secure the mounting plate to the junction box with the mounting screws (not illustrated).
5. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
6. Now, twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
    a) Negative (-) fixture wire to negative (-) output driver wire
    b) Positive (+) fixture wire to positive (+) output driver wire
8. Carefully tuck all the wires behind the mounting plate into the junction box.

III. Installing the Fixture

1. Place the fixture backplate/base onto the mounting plate and secure it in place with the fixture screws and the Allen wrench to finish.
2. For wet locations, caulk around the fixture base with a waterproof construction sealant to finish installation.

© 2025 Visual Comfort & Co. All rights reserved.